

## LIMITED PRODUCT WARRANTY

BALMAR warrants to the original consumer/purchaser the product is free from any defects in material or workmanship for a period of one year from the date of purchase. If any such defect is discovered within the warranty period, BALMAR will replace the regulator free of charge, subject to verification of the defect or malfunction upon delivery or shipping prepaid to BALMAR.

This warranty DOES NOT apply to defects or physical damage resulting from abuse, neglect, accident, improper repair, alteration, modification, or unreasonable use of the products resulting in breakdown, cracked or broken cases nor are parts damaged by fire, water, freezing, collision, theft, explosion, rust, corrosion or items damaged in shipment in route to BALMAR for repair. BALMAR assumes no responsibility for consequential damage or loss or expense arising from these products or any labor required for service or repair.

BALMAR WILL NOT repair or be held responsible for any product sent without proper identification and return address or RA number clearly marked on the package. You must include proof of date and place of purchase (photocopy of purchase invoice) or we cannot be responsible for repairs or replacement. In order to expedite warranty claims more efficiently, BALMAR asks that prior to returning a defective product for repair, you call their customer service department for a warranty return authorization number. If factory service is required, you can contact our BALMAR Customer Service Department Monday through Thursday, 7:30 AM to 5:30 PM, (PST)1-360 435-6100 ext "3". Material required for the repair or replacement for the defective part or product is to be supplied free of charge upon delivery of the defective regulator to BALMAR, 18930 59 Ave. NE, Arlington, WA 98223. Customer is responsible for all return transportation charges and any air or rush delivery expense. BALMAR reserves the right to determine whether to repair or replace defective components.

THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. NO PERSON, AGENT, DEALER IS AUTHORIZED TO GIVE ANY WARRANTY.

BALMAR 353 James Record Rd SW, Huntsville, AL 35824, Phone: (360) 435-6100, Fax: (360) 435-3210, E-mail: balmar@balmar.net, Web: www.balmar.net

For more information, contact Balmar Customer Service or Technical Support at 360-435-6100 or visit the Balmar website at www.balmar.net. Ballard Commercial Industries, Inc. (Balmar) believes all information herein to be factual and accurate, yet maintains no liability for factual or typographic error. In addition, Balmar retains the right to revise or update products without notification. Visit the Balmar website for product updates or bulletins that may apply to your alternator or voltage regulator. No part of this document may be reproduced without express written permission of Ballard Commercial Industries, Inc. © 2010 Ballard Commercial Industries, Inc. (BALMAR).

## NOTES:

# BALMAR<sup>®</sup>

WWW.BALMAR.NET

## DC CHARGING SOLUTIONS

### MAX CHARGE MC-614

### MULTI-STAGE

### VOLTAGE REGULATOR



BALLARD COMMERCIAL INDUSTRIES, INC.  
18930 59TH AVE., NE, ARLINGTON, WA 98223  
ON THE INTERNET: WWW.BALMAR.NET  
© COPYRIGHT 2010, BALMAR

## INSTALLATION AND OPERATION MANUAL

### Introduction

The Balmar Max Charge MC-614 is the latest generation of smart, multi-stage Balmar Max Charge voltage regulators. Designed to provide precise voltage control for Balmar high-output 12-volt alternators and other externally regulated P-type alternators, the MC-614 features user selectable programs for the following battery types: Deep cycle flooded, standard flooded, gel, AGM and spiral wound AGM batteries. In addition, the regulator features a universal default program that's safe for most battery types, as well as a program that's designed for use in vessels utilizing voltage sensitive halogen equipment.

In addition to the user selectable preset programs, the MC-614 features a wealth of advanced programming modes which make it possible to tailor charging to a wide variety of environments.

When used in conjunction with optional MC-TS-A and MC-TS-B alternator and battery temperature sensors, the MC-614 features the ability to monitor and respond to a range of ambient temperature conditions, including reduction or discontinuation of charging voltages, should a catastrophic over-temperature condition occur at the alternator or the batteries.

Introduction.....	1	Basic Programming.....	9
Safety Considerations.....	1	Adjust For Battery Type .....	9
Regulator Installation.....	2	Belt Load Manager .....	10
Unpacking Box .....	2	Short/Long Display.....	10
Locate/Mount Regulator .....	2	Stator Output Monitoring....	10
Basic Wiring Installation.....	2	Advanced Programming....	11
Regulator Terminal Layout ..	3	Unlock Adv. Programming..	11
Installation By Wire .....	4-6	Adjust Adv. Programs .....	11-12
Initial Start Up .....	6	Default Program Settings ..	12
Regulator Operation.....	7	Battery Equalization .....	12
Regulator Display Modes.....	8	Add'l. Regulator Features..	13
Using Magnetic Tool.....	9	Troubleshooting .....	13-15
Regulator Programming .....	9	Warranty .....	16

### Safety Considerations

1. Always disconnect your battery banks and ensure that switches are "OFF" prior to installing your regulator.
2. Remove loose-fitting clothing or jewelry, which could become entangled in your motor or other machinery prior to installing regulator.
3. Wear ANSI-approved safety eye-wear and protective gear.
4. DO NOT attempt to modify the regulator. Modifications could result in damage to your charging system, and will void your warranty.
5. Do not attempt installation if you are tired or fatigued.
6. Ensure that the engine has cooled before initiating installation.
7. Do not attempt regulator installation while using alcohol or medication that could impair your judgment or reaction time.
8. Always use the right tool for the job. Improper tool use may damage regulator or your vessel, and could result in personal injury.
9. Take time to read the manual. Equipment damage and possible injuries may result from an incomplete understanding of the installation and operation of the MC-614 regulator. If you are unfamiliar with marine electrical systems, consult with a licensed marine electrician.

**CAUTION:** The following instructions are intended for use by experienced marine electrical installers. If you are not experienced at installing electrical system components, we recommend the use of a qualified marine electrical technician.

## Regulator Installation

The following information is intended to provide the installer with the basic information required to complete installation. This section of the installation manual will deal with mounting, wiring connections and basic programming for battery type. Additional information regarding advanced programming adjustments and troubleshooting are addressed later in the manual.

### Unpacking The Box

Your Max Charge MC-614-H regulator kit is packaged with the following items:

- Max Charge MC-614 regulator
- 54" wiring harness
- Fused (1A) battery sense wire pigtail
- Magnetic programming tool
- Installation and operation manual

If any of the listed items is not included with your regulator kit, call our customer service department at 360-435-6100. Please note -- if your regulator box is marked Max Charge MC-614, without the "H" designation, your kit will not include the wiring harness or fused battery sense pigtail.



### Locate And Mount The Regulator


Choosing a mounting location for your voltage regulator should be determined based on the following factors; distance from alternator, distance from inverters, transmitters and other sources of RF noise, convenient access and readability of the display. The regulator wiring harness is 54 inches long, providing a three to four foot radius for mounting. Ample airflow is essential for the regulator's proper operation. Ensure that the regulator is free from obstructions that restrict air movement around or below the regulator's aluminum heat sink. While the regulator is designed to operate safely in conditions typical of a marine engine compartment, the regulator may be better protected, and easier to use and monitor if mounted outside of the engine compartment.

Should it be necessary to install the regulator further than 54 inches from the alternator, ensure that any wire extensions are properly connected, as resistance in the harness wiring can affect charging efficiency. If harness length must reach beyond approximately eight feet, replace the RED power and BLUE field wires with larger gauge wire that's sized to ensure voltage drop < 3%.

### Basic Wiring Installation

The regulator's wiring harness includes six wires required for standard installation. Four of those wires are connected to the regulator via a Ford-style plug connector that's pre-installed on the regulator. These wires include the Ground (BLACK), Power (RED), Ignition (BROWN) and Field (BLUE). Plug is shown at right.


In addition, the harness includes a separate Stator (WHITE) wire. The proper terminal connection points for this, and additional wiring connections, are illustrated on the pin location legend shown and discussed on the following pages.

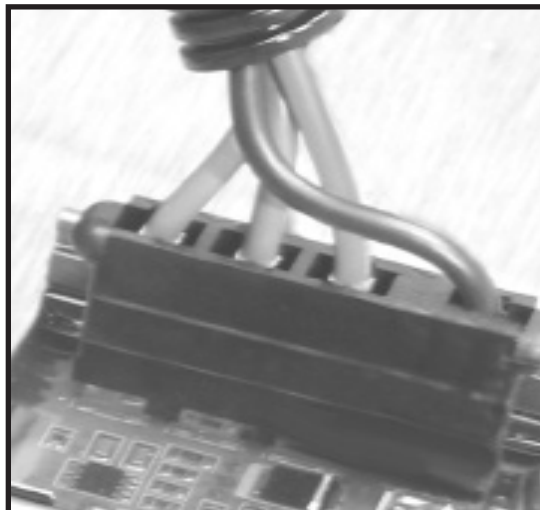

If there is little or no magnetic pull at the pulley shaft or at the rear bearing, initiate the following test:

With the key off and the engine off, remove the large harness plug from the regulator.

1. Insert the end of a short length of electrical wire to the RED connector slot of the regulator harness and the other end of the wire to the BLUE connector slot. This bypasses the regulator and tests the alternator and the harness.
2. Using your steel screwdriver, inspect for a magnetic field as described above.
3. With your voltmeter, check for voltage on the blue wire at the alternator. If voltage does not exist, the harness may be at fault. If voltage does exist at the harness, but no magnetism is present, the alternator is likely to be malfunctioning.
4. If a magnetic field is present. Both harness and alternator brushes and rotor appear to be working properly. If no magnetic field is present, proceed with the next test.

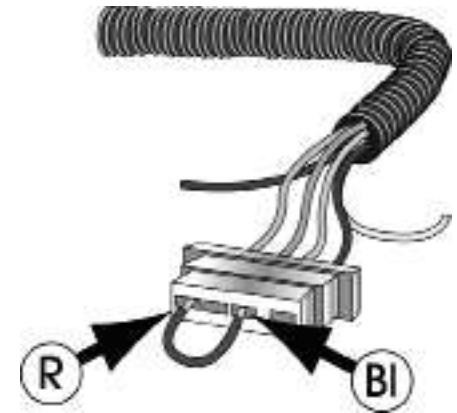

Testing the actual output of the alternator is known as "Full Field Testing". This can be accomplished by jumping a positive 12VDC current to the field terminal at the rear of the alternator. This test eliminates both the regulator and the harness, making it easier to isolate your investigation to the alternator.

**CAUTION:** Ensure that all voltage sensitive equipment is turned off prior to starting the engine. Voltage is unregulated during this test and could damage sensitive electronics. DO NOT let the engine run any longer than necessary to detect charging. If the system is not charging, remove the alternator and have it inspected by a qualified alternator shop, or call Balmar for warranty evaluation.

To test the alternator:

1. Clip a jumper wire to the positive post of the alternator, or on the battery side of the isolator (if an isolator is in use). Use a SHIELDED alligator clip for post attachment. Unintentional contact between the alligator clip and the alternator case could result in damage to your electrical system.
2. Disconnect the field wire from the rear of the alternator and attach the other end of the jumper wire to the alternator's Field terminal (F). **CAUTION:** Do not allow the wire to contact the case while it is attached to the positive post. The case is grounded and severe damage could occur.
3. The regulator is now bypassed. When the ignition is engaged and the motor is started, the voltage should rise and charging current should be present.
4. The motor should be run long enough to determine that charging voltage is present. Unregulated voltage can rise quickly. Do not allow extended unregulated charging to occur without carefully monitoring voltage levels. If the alternator fails to generate voltage during field testing, a malfunction of the alternator is likely. Contact your local alternator repair shop or Balmar's technical service staff for recommendations.

## Conclusion

If your readings differ substantially from the "Expected Readings" listed in the troubleshooting charts, the regulator may be malfunctioning, or there may be a continuity problem. Contact our technical support staff at (360) 435-6100. If you determine that repair service is necessary for either your alternator or regulator, please gather the following information before contacting our service technicians: Make and model of alternator. Model of voltage regulator and date of mfg. (date punched on rear side label of regulator). Voltage readings on red, brown and blue wire at regulator with engine off, key on. Voltage readings on red, brown and blue wire at regulator with engine running at a fast ideal 1400 rpm.

### NOTES:



## Voltage Regulator Testing

Set your voltmeter to 12VDC and connect the negative lead to the BLACK ground wire at the regulator as shown at in the diagram at right.


1. With the ignition turned OFF, check voltage on the RED (power), Voltage Sense (Terminal #9), BLUE (field) and BROWN (ignition) wires in the regulator plug.

Voltages should be as follow:

- RED wire equal to battery voltage
- Terminal #9 RED wire equal to battery voltage
- BLUE wire zero volts
- BROWN wire zero volts

2. With the ignition in the ON position (engine not running), check voltage on the RED (power), Secondary RED on Terminal #13 (voltage sense) BLUE (field) and BROWN (ignition) wires in the regulator plug:

- RED wire equal to battery voltage
- Terminal #9 RED wire equal to battery voltage
- BLUE wire between 4V and 11V
- BROWN wire equal to battery voltage

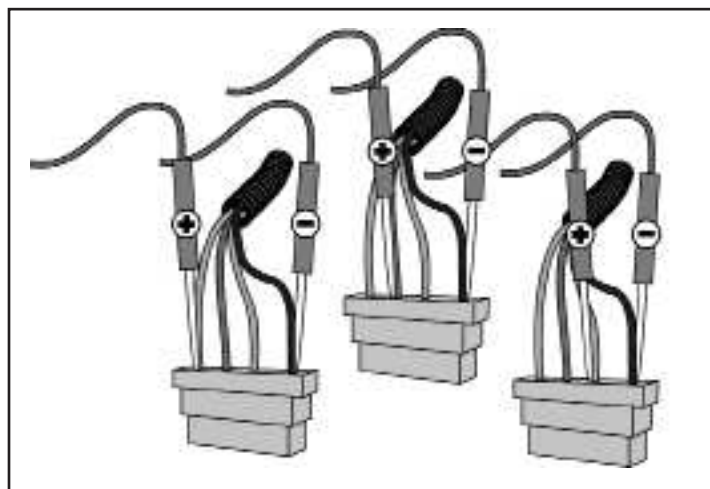

PLEASE NOTE: In systems where the ignition (BROWN) wire is supplied power via an oil pressure switch, jump directly from test #1 to test #3.

3. With the ignition in the ON position (with engine running at 1,400 rpm fast idle), check voltage on the RED (power), Secondary RED on Terminal #9 (voltage sense) BLUE (field) and BROWN (ignition) wires in the regulator plug. Voltages should be as follow:

- RED wire equal to battery voltage
- Terminal #9 RED wire equal to battery voltage
- BLUE wire between 4V and 11V
- BROWN wire equal to battery voltage

If voltage is not present on the RED, the BROWN and the Positive Battery Sense Wire, the regulator will not work. If voltage is as expected at the RED the BROWN and Positive Battery Sense wire, and there is zero, or an unexpected voltage reading at the BLUE wire, contact our technical support staff at (360) 435-6100, or e-mail us at [balmar@balmar.net](mailto:balmar@balmar.net).

If all voltages at the regulator meet expectations, yet the alternator is not producing charging current, test the alternator. The following tests are recommended for determining alternator functionality.

## Alternator Testing


TEST #1- The following test is used to isolate the alternator and determine if the failure is a result of the alternator. Once again, testing at either the alternator or regulator is only effective if the wiring, fusing and batteries have been determined to be in correct working order. The alternator and regulator can be tested for function by determining if a magnetic field exists at the alternator's pulley shaft or rear bearing. To test:

1. With the ignition in the OFF position, place the tip of a non-magnetic steel screwdriver near the nut on the pulley shaft or near the rear bearing of the alternator. There should be no evidence of a magnetic field pulling the screwdriver toward the alternator. (A slight amount of magnetism may be present, due to residual voltage in the alternator.)
2. Engage the ignition, without starting the engine, to activate the voltage regulator. If an oil pressure switch is used, a jumper between the RED and BROWN wires in the Ford-style plug will activate the regulator.
3. After allowing time for the regulator's start-up delay, place the head of a steel screwdriver near the nut on the pulleyshaft or near the rear bearing of the alternator. There should be substantial magnetic pull. If a magnetic field is present, the voltage regulator, alternator brushes and rotor are likely to be working properly.

## MC-614 Regulator Terminal Layout

1. **GROUND INPUT** - Connects regulator to system ground via alternator ground terminal. BLACK wire included in Ford style plug.
2. **POWER INPUT** - Supplies power to operate the regulator and deliver field current to excite the alternator. RED wire included in Ford-style plug.
3. **IGNITION INPUT** - Connects to a switched source of battery voltage (to ignition switch or oil pressure switch). BROWN wire in regulator wiring harness.
4. **FIELD OUTPUT** - Provides external (P-type) alternator field control for the primary alternator. BLUE wire in regulator wiring harness.
5. **ALT. TEMP. (-)** - For use with optional Alternator Temperature Sensor (MC-TS-A). SEE INFO BELOW (#6).
6. **ALT. TEMP. (+)** - For use with optional Alternator Temperature Sensor (MC-TS-A). Sensor lug connects to rear case bolt of alternator, enabling regulator to monitor and react to alternator over-temperature condition. USE CARE TO ENSURE POSITIVE AND NEGATIVE WIRES ARE CONNECTED TO THE APPROPRIATE REGULATOR TERMINAL.
7. **BAT. TEMP. #1 (-)** - For use with optional Battery Temperature Sensor (MC-TS-B). SEE INFO BELOW (#8).
8. **BAT. TEMP. #1 (+)** - For use with optional BATTERY Temperature Sensor (MC-TS-B). Sensor lug connects to negative battery post, enabling regulator to monitor and respond to battery temperature condition. USE CARE TO ENSURE POSITIVE AND NEGATIVE WIRES ARE CONNECTED TO THE APPROPRIATE REGULATOR TERMINAL.
9. **POSITIVE VOLTAGE SENSE** - Connects to battery being charged. Use RED fused pigtail connector (included) at battery end of user-installed wire. THE SENSE WIRE MUST BE INSTALLED FOR THE REGULATOR TO OPERATE.
10. **DATA TX** - Factory use only.
11. **DATA RX** - Factory use only.
12. **STATOR IN** - Connect to WHITE wire included in regulator wiring harness.
13. **TACHOMETER OUT** - Connect to tachometer sender wire when using stator output to provide a signal for an electric tachometer. NOT REQUIRED when a mechanical tachometer is used.

14. **BAT. #2 TEMP. (-)** - For use with optional Battery Temperature Sensor (MC-TS-B).
15. **BAT. #2 TEMP. (+)** - User selectable circuit can be used to temperature sense at a second battery bank. Requires either optional MC-TS-B sensor cable. USE CARE TO ENSURE POSITIVE AND NEGATIVE WIRES ARE CONNECTED TO THE APPROPRIATE REGULATOR TERMINAL.
16. **AUX. #1 LAMP** - provides a source of ground under the following conditions: Full Field (the alternator is working at full power), Small Engine Mode (the regulator is being controlled at 50% field output), or Equalization Mode. Connect to negative terminal of audible alarm or lamp. 500 mA maximum.
17. **DASH LAMP** - provides a source of ground under the following conditions: Low charging voltage (<12.5V), high charging voltage (>15.5V), high alternator temperature (>105°C), or high battery temperature (>52°C). 500 mA maximum.

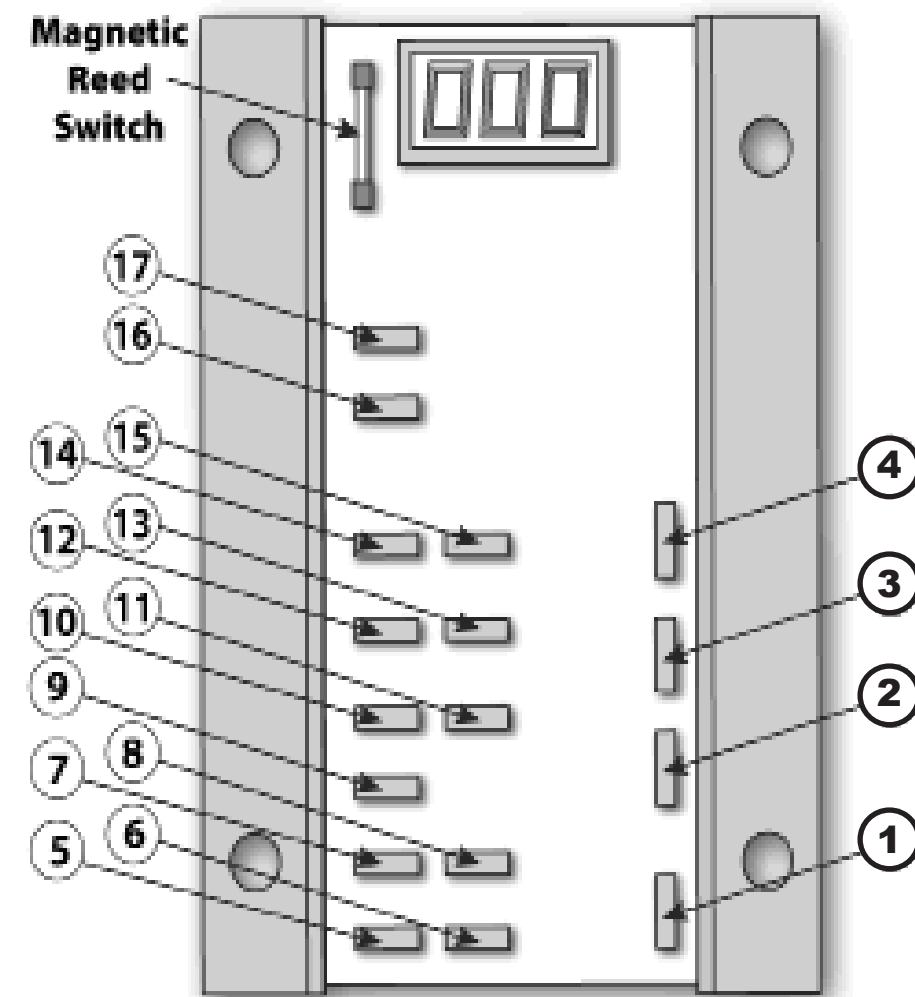

## Installation By Wire

### Install BLACK Ground Wire

The BLACK Ground Wire (#1 in diagram at right) are included in the four-wire Ford-style plug on the wiring harness and are factory installed on regulator packages designated with "H" at the end of the model number. The other end of the Ground Wire is fitted with a ring terminal connector. In most applications, this wire can be connected directly to the alternator's ground terminal post. Both alternators and regulators must be connected to system ground.

### Install RED Power Wire

The RED Power Wire (#2 in diagram at right) is included in the four-wire Ford-style plug and is factory installed on regulator packages designated with "H" at the end of the model number. The other end of the Power Wire is fitted with a ring terminal connector. In most applications, this wire can be connected directly to the alternator's positive output post. When a diode-type battery isolator is used, the power and voltage sense (#9) wires must be connected to the battery side of the battery isolator. Power Wire is equipped with 10-amp ATC type fuse. The Power Wire must be fused to ensure against damage to the voltage regulator.

### Install BROWN Ignition Wire

The BROWN Ignition Wire (#3 in diagram at right) provides the ON/OFF voltage for the regulator. This wire is included in the Ford-style plug at the regulator end of the wiring harness. The other end of the wire is fitted with a butt connector. Typically, the ignition wire is connected to the ON side of the ignition switch. This may be at the actual switch, or to the wire in the existing engine wiring loom that delivers switched voltage from the ignition switch. In some cases, an oil pressure switch may be used to activate the regulator. In either case, the regulator's ignition wire must see zero volts when the engine ignition is switched off.

### Install BLUE Field Wire

The BLUE Field Wire (#4 in diagram at right) provides regulated current to control alternator output. The wire is included in the wiring harness Ford-style plug and is pre-connected at the regulator. At the other end of the wire, you'll find either a plug or a ring terminal, depending on the alternator's field terminal connection. Attach the field wire to the alternator's field terminal.

### Install Alternator Temperature Sensor



The optional Alternator Temperature Sensor (MC-TS-A) allows your MC-614 voltage regulator to monitor your alternator for temperatures in excess of safe operating levels. The MC-TS-A sensor includes a 54" cable, a sensing attachment lug and positive and negative regulator plug-in connectors. To install the MC-TS-A:

1. Connect the sensor lug to one of the four bolts that hold the alternator's front and rear cases together. Extend sensor cable to the regulator. The cable can be included within the regulator's wiring harness, or can be run alongside the harness and attached with cable ties.
2. Connect the positive and negative female connectors to the Alternator Temp. Sense terminals on the regulator (#5 is negative, #6 is positive). It is essential that the terminals match the polarity of the regulator connection pins (red wire to positive terminal and black wire to negative terminal).

### Install Battery #1 Temperature Sensor

The optional Battery Temperature Sensor (MC-TS-B) allows your Max Charge MC-614 voltage regulator to monitor your battery bank for changes in battery temperature, and adjust charging voltages to suit. The MC-TS-B sensor includes a 20-foot cable, a sensing attachment lug and positive and negative regulator plug-in connectors. To install the MC-TS-B:

1. Connect the sensor lug to the battery negative post closest to the center of the battery bank. Extend sensor cable to the regulator.
2. Connect the positive and negative female connectors to the Battery temperature sensors on the regulator (#7 is negative, #8 is positive). It is essential that the terminals match the polarity of the regulator connection pins (red wire to positive terminal and black wire to negative terminal connectors).

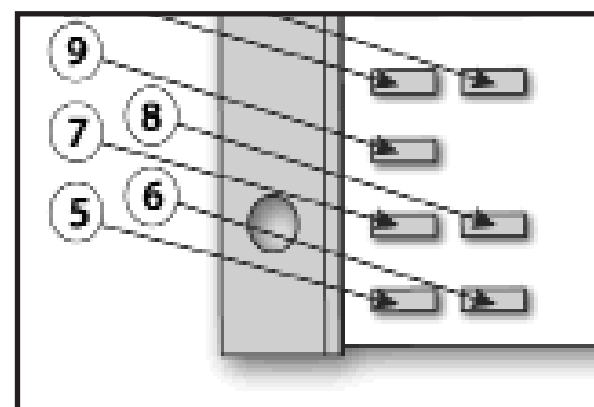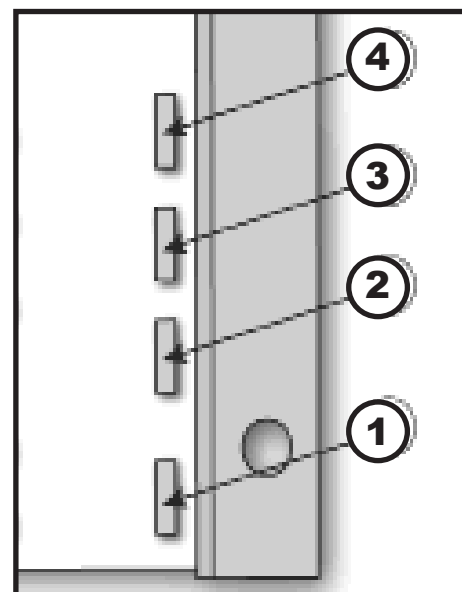


## Additional Regulator Features Small Engine Mode

In situations where additional power is needed for propulsion, the MC-614 provides the option to manually reduce regulator field output by approximately one half. This option, called Small Engine Mode, can be accessed by creating a direct pathway between the positive and negative Alternator #1 Temperature Sensor terminals. This can be done by splicing into the positive and negative wires of the Alternator Temperature Sensor cable (MC-TS-A) with a switched wire. With the switch in the OFF position, the Alternator #1 Temperature Sensor will work normally. With the switch in the ON position, the regulator will reduce field output by approximately 50%.

To enable the Small Engine Mode:

1. If the Alternator Temperature Sensor cable is being used, replace the female terminal connectors on the cable with Multi-Stack Connectors (Ancor Part # 230612).
2. Install a standard ON/OFF switch in a location that's easily reached from the helm.
3. Run wires from the switch back to the positive and negative terminals of the Alternator #1 Temperature Sensor terminals (terminals #5 and #6).
4. Add appropriate connectors to the switched wires and connect to the positive and negative terminal connections.

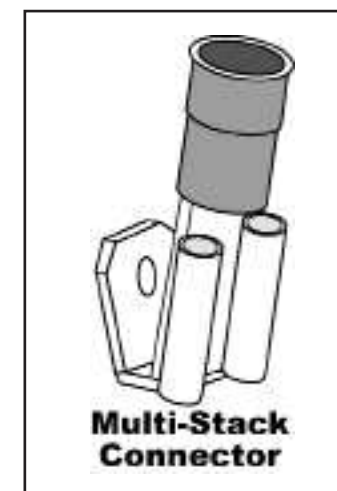

### Dash Lamp

The MC-614 provides a Dash Lamp circuit that's capable of providing a signal to a user supplied and installed audible or visual alert if the following issues were to occur while the regulator is in operation;

- Low Battery Voltage <12.8V
- High Battery Voltage >15.5V
- High Alternator Temperature >225°F (Requires installation of MC-TS-A sensor cable.) Temperature adjustable.
- High Battery Temperature >125°F (Requires installation of MC-TS-B sensor cable.)
- Alternator Failure (No voltage on stator).

### Aux #1 Lamp

The MC-614 provides an Auxiliary Lamp circuit that's capable of providing a signal to a user supplied and installed audible or visual alert to indicate the following while the regulator is in operation:

- Small Engine Mode is activated,
- Regulator is at full field.

## System Troubleshooting

### Regulator Troubleshooting

The majority of charging difficulties can be attributed to damage, corrosion or wear at wiring, fusing or wiring connections. Before attempting to troubleshoot alternator or regulator issues, be sure to address the following:

1. Remove and clean all charging system electrical connections (positive and negative). Check the voltage regulator's harness for continuity. Wires and terminals can and will become corroded, and need to be cleaned or replaced. Ensure that the regulator's ground wires are provided with a clean connection to system ground.
2. Inspect and replace 10A and 1A ATC type fuses in the regulator wiring harness if fuses appear to be damaged or corroded. Ensure that the fuse holder is also free of corrosion.
3. Charge all batteries to their proper fully charged state, and determine if they are serviceable. If your batteries are flooded-type, use your hydrometer to determine their condition.
4. Check and tighten alternator belt. If the belt show signs of wear or damage, replace it. Always replace existing belts with the finest quality replacements available.

If batteries and wiring are in suitable condition, use the tests on the following page to determine if charging problems are a result of a faulty alternator or regulator. These tests provide an opportunity to isolate the alternator, regulator and wiring harness in order to determine the problem source. In order to perform these tests, you will need an independent DC meter (preferably a digital type). In an emergency, a 12V light bulb or test light can be used to help determine if power or working grounds exist. An amp meter and a battery hydrometer with a thermometer are also helpful diagnostic tools.



Fv

**Float Voltage.** Controls the target voltage for float stage. Adjustment spans from 13.0 to 13.8 volts. Default is based on battery program selected. To reverse direction of scroll, release magnet and wait for LED to display Fv code. Re-activate switch and release when desired value is indicated.

F1c

**Float Time.** Controls time setting for float mode. Standard value set is 18 minutes. Settings are from 6 minutes to 12 hours. To reverse direction of scroll, release magnet and wait for LED to display F1c code. Re-activate switch with magnet and release when desired value is indicated.

ALl

**Low Voltage Limit.** Allows user control of the regulator's low voltage limit.

FbA

**Field Threshold - Bulk To Absorption .** Controls the criteria used to determine field output required to maintain calculated bulk charging mode. Factory set at 65% field output. Raising "fba" shortens calculated bulk charge time. Lowering "fba" increases calculated bulk charge time. Span of adjustment is 16% to 96%. To reverse direction of scroll, release magnet and wait for LED to display "fba" code. Re-activate switch and release when desired value is indicated.

FFl

**Field Threshold - Float To Absorption .** Controls the criteria used to determine the field current threshold required to cycle between absorption and float charging modes. Factory set at 65%. Raising "ffl" increases calculated float charge time. Adjusted in 1% increments. Span of adjustment is 16% to 96%. To reverse direction of scroll, release "ffl" code. Reactivate switch with magnet and release when desired value is indicated.

AL1

**Alternator Temperature Threshold.** Controls the setpoint at which point field current is reduced when the the alternator temperature sensor indicates an over-temp condition at the alternator. Requires temperature sensor installation. Preset at 108°.

B1l

**Battery Temperature Threshold.** Controls the setpoint at which point field current is discontinued when the the battery temperature sensor indicates an over-temp condition at batteries being sensed. Requires temperature sensor installation. Preset at 52°C.

SLP

**Slope Voltage Correction.** Adjusts the voltage (in millivolts) the regulator uses when monitoring battery temperature sensing. Can be custom adjusted to meet the needs of unique battery technologies. Consult with battery manufacturer for specific slope voltage recommendations.

**Battery Equalization**

Due to the hazardous nature of equalization (the intentional overcharging of batteries to remove sulfation from the battery plates) we strongly recommend that the process be done at the dock with a voltage-adjustable shorepower charger. If it is absolutely impossible to do so, equalization can be done with the alternator and regulator by doing the following:


1. In Advanced programming, Pra, change the following values.
2. Cl to a voltage above the desired equalize voltage.
3. AHL to a voltage above the desired equalize voltage.
4. Bv to the desired equalize voltage.
5. Blc to the desired equalize time.
6. Disconnect ALL battery temperature sensors.
7. YOU MUST MONITOR THE BATTERIES DURING EQUALIZE PROCESS!
8. Once the equalization is complete, activate the regulator's basic programming and reset the battery program mode to UFP, and allow the program to save. Once saved, access the basic programming mode again and reset for the desired battery program.

**WARNING: EQUALIZATION IS A MANUAL PROCESS WITH POTENTIAL DANGERS. DO NOT LEAVE SYSTEM UNATTENDED.**

Default Program Settings By Battery Type							
	UFP	FDC	GEL	AGM	OPS	FSB	HAL
START DELAY (SECS.)	1	1	1	1	1	1	1
SOFT RAMP (SECS.)	60	60	60	60	60	60	60
BULK VOLTAGE	14.1	14.6	14.1	14.38	14.6	14.4	14.0
BULK TIME (MINIMUM)	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN
ABSORPTION VOLTS	13.9	14.4	13.9	14.18	14.4	14.2	13.8
ABSORPTION TIME (MINIMUM)	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN
FLOAT VOLTS	13.4	13.4	13.7	13.4	13.4	13.4	13.5
FLOAT TIME (MINIMUM)	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN	18 MIN
FLOAT TIME (MAXIMUM)	12 HRS.	12 HRS.	12 HRS.	12 HRS.	12 HRS.	12 HRS.	12 HRS.
HIGH VOLTAGE ALARM (VOLTS)	15.2	15.6	15.1	15.38	15.6	15.4	15.0
LOW VOLTAGE ALARM (VOLTS)	12.7	12.7	12.7	12.7	12.7	12.7	12.7
MAX BAT. TEMP.	125 F/52 °C	125 F/52 °C	125 F/52 °C	125 F/52 °C	125 F/52 °C	125 F/52 °C	125 F/52 °C
MAX ALT. TEMP.	225 F/107 °C	225 F/107 °C	225 F/107 °C	225 F/107 °C	225 F/107 °C	225 F/107 °C	225 F/107 °C

**Install Positive Battery Sense Wire (REQUIRED FOR REGULATOR OPERATION)**

Included with the MC-614 wiring harness kit is a fused wiring pigtail which features a ring terminal at one end and a butt connector at the other. In the center is a 1-Amp ATC-type fuse and fuse holder. This wire **MUST** be connected at the (#9) Positive Battery Sense terminal. A female quick connect plug has been pre-attached on the terminal #9 pin. To complete installation of the sense circuit:

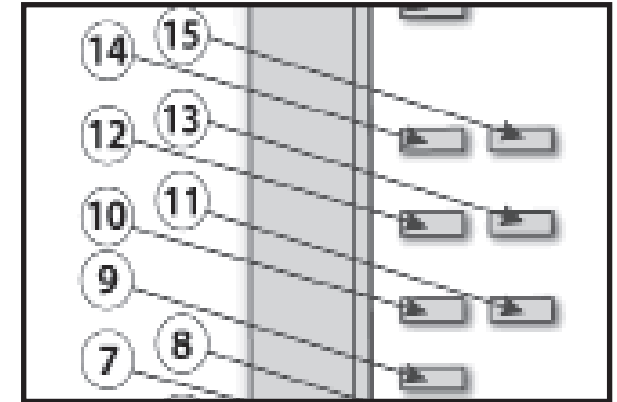

1. Identify the favored location for battery sensing. In most instances, the positive output of the alternator, the common side of a battery switch, or the positive post of the battery being charged will work best. If the batteries are connected to a battery isolator, the positive sense wire must be connected to the battery side of the isolator, preferably at the larger of the battery banks.
2. Attach the included wiring pigtail with 1-amp fuse to a length of wire of sufficient to reach the desired sensing location. If the length of the wire run between the regulator and the sensing location is 8' or less, a 16-gauge wire is satisfactory. If the wire run exceeds 8', increase the wire size to 14 gauge.
3. Remove the female 1/4" spade terminal from the terminal #9 pin. Crimp the spade terminal to the sense wire and reconnect the spade to the #9 terminal pin.

**Install WHITE Stator-In And Tach-Out Wires**

When an electric tachometer is used, the alternator's stator output will provide the electrical pulse needed to drive the tachometer. The MC-614 has been designed to provide regulated tach output when the WHITE stator wire is connected to the regulator's Stator In (#12 in diagram) terminal and the outfeed wire to the electric tachometer is connected to the Tach Out terminal (#13 in diagram).

Stator output can also be used to detect alternator failure. See Page 6 for details.

When the tachometer is connected via the MC-614, the regulator will ensure that it will not discontinue supplying field current when the batteries are fully charged. When connecting the tachometer to the alternator stator output, it will be necessary to determine the number of poles in the alternator in order to properly adjust your tachometer. Most Balmar alternators feature 12-pole rotors and stators, though, in some cases, the pole count may be 14. See alternator manual for specifics. See your tachometer manual for adjustment instructions.

**Install Battery #2 Temperature Sensor**

Your Max Charge MC-614 voltage regulator can accommodate a secondary battery temperature sensor. Used in conjunction with an optional MC-TS-B battery temperature sensor, the regulator can monitor temperature at a secondary battery bank and respond to a battery over-temperature condition by discontinuing charging.

To install a secondary battery temperature sensor:

1. Connect the temperature sensor to the secondary battery bank following the directions provided for the primary battery temperature sensor.
2. Plug the positive and negative sensor to the appropriate positive connector; the BLACK negative sensor wire should be connected to terminal pin #14. The RED positive sensor wire should be connected to the #15 terminal pin.

**Data TX and Data RX**

Data TX and RX circuits provide a connection point with outside monitoring equipment. At this time, the Data TX and RX circuits are only for factory use.

**CAUTION: Reversing the polarity of the terminal connections on any of the alternator or battery temperature sensors can result in invalid sensing and potential damage to alternators, regulator and/or batteries.**

## Install Aux. 1 Lamp



The Max Charge MC-614 regulator's Aux. #1 (#16) terminal provides the ability to use a visual indicator when the regulator is operating under the following conditions: Full field (the alternator is working at full power) and Small Engine Mode (the regulator is being controlled at 50% field output). When a described condition is detected, the regulator sends the Aux. #1 terminal from neutral to ground. To utilize the Aux. #1 Lamp function:

1. Connect a small LED or incandescent lamp (maximum current flow is 500 mA) to a positive voltage source.
2. Connect the negative terminal on the lamp to the Aux. #1 terminal on the regulator.

## Install Dash Lamp


The Max Charge Dash Lamp (#17) terminal provides the ability to activate a visual or audible indicator when the regulator monitors the following conditions: Low system voltage, high system voltage, high alternator temperature, high battery temperature (temperature conditions are only indicated when appropriate temperature sensors are connected) and no voltage on stator, indicating that the alternator has failed. When a described condition is detected, the regulator sends the Dash Lamp terminal from neutral to ground. To utilize the Dash Lamp function:

1. Connect a small LED or incandescent lamp, or an audible (piezo) alert (maximum current flow is 500 mA) to a positive voltage source.
2. Connect the negative terminal on the lamp or audible alert to the Dash Lamp terminal on the regulator.
3. When connected, the lamp should flash at regulator start-up to indicate active status.

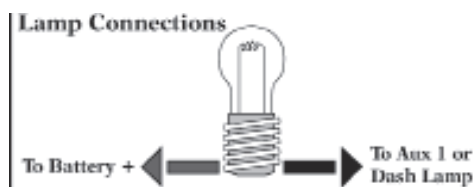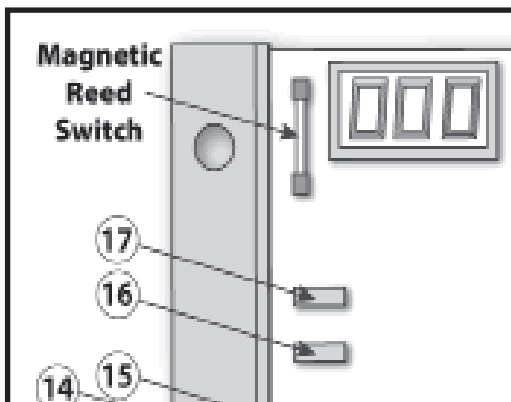

## Magnetic Reed Switch

Looking much like a small thermometer atop the regulator's circuit board, the magnetic reed switch provides a durable, sealed interface that enables the user to set basic and advanced regulator programming features. Included with the regulator is a small screwdriver that doubles as the regulator's programming tool. A small magnet embedded in the tip of the screwdriver's handle allows the user to activate the magnetic reed switch. By holding the magnet to the RED dot located at the end of the reed switch, the user allows the user to scroll through the regulator's various program modes and individual program selections.

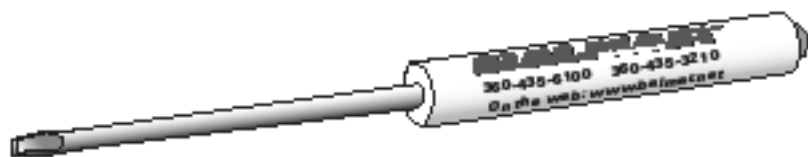

## Initial Pre-Flight Test And Start-Up

When the regulator is properly mounted and the regulator wiring is installed, the MC-614 is ready for pre-flight testing. Before turning on the engine, it is advisable to check voltages at the following terminal connections to ensure that the wiring is correct. Test #1 verifies proper voltage values with the regulator turned off. Test #2 verifies the expected voltages with the regulator turned on.

Note: If the regulator's BROWN ignition wire is receiving it's switched source of voltage from an oil pressure switch, it may be necessary to start the engine before applying test #2. If the engine must be run to accomplish test #2, be sure that alternator is properly cabled on both positive and negative sides to the battery being charged. Failure to do so could result in damage to the regulator and alternator.

Using your hand-held multi-meter, test the following wiring terminals for voltage:

### TEST #1: Engine/Ignition Off

- Primary RED Power Wire (Terminal #2) >12V
- Positive Voltage Sense Wire (Terminal #9) >12V
- BROWN Ignition Wire (Terminal #3) 0V
- Primary BLUE Field Wire (Terminal #4) 0V

### TEST #2: Engine/Ignition ON

- Primary RED Power Wire (Terminal #3) >12V
- Positive Voltage Sense Wire (Terminal #9) >12V
- BROWN Ignition Wire (Terminal #2) >12V
- Primary BLUE Field Wire (Terminal #1) 4-12V

## Advanced Programming

### Accessing The Advanced Programming Mode

The MC-614 provides a broad range of advanced user adjustments in its password-protected Advanced Program mode. The Advanced Program mode is accessed via the Basic Program mode. To access the Advanced Program mode:

1. With the regulator activated, TOUCH / HOLD the magnet to the RED dot on the regulator's epoxy potting.
2. The regulator will cycle to PRO. RELEASE the magnet from the switch.
3. The regulator will cycle through all of the Basic Program modes; bA, bEL, and dSP -- followed by three dashes.
4. TOUCH / HOLD when the three dashes are displayed. The dashes will be replaced by AP0 followed by AP1, and so on.
5. When the display indicates AP5, RELEASE.
6. The display will cycle to PrA, indicating entry into the Advanced Programming mode.

<b>Pr o</b>	INDICATES ENTRY INTO PROGRAM MODE	<b>dSP</b>	INDICATES SELECTION MODE FOR SHORT/LONG DISPLAY	<b>AP 1</b>	INDICATES ENTRY INTO PASSWORD MODE FOR AP MODE
<b>bA</b>	INDICATES SELECTION MODE FOR BATTERY TYPE	<b>bdL</b>	INDICATES ALTERNATOR FAILURE ADVISORY (BDL)	<b>AP 5</b>	INDICATES PASSWORD FOR ADVANCED PROGRAM MODE
<b>bEL</b>	INDICATES SELECTION MODE FOR BELT LOAD MANAGER	<b>--</b>	INDICATES ENTRY INTO PASSWORD MODE FOR AP MODE	<b>Pr A</b>	INDICATES ENTRY INTO THE ADVANCED PROGRAM MODE

## Advanced Programming Modes

### Making Advanced Programming Adjustments

Once accessed, the Advanced Program mode allows the user to adjust time, voltage and temperature settings for most operational modes. When the desired mode is indicated, TOUCH / HOLD the magnet to the RED dot on the epoxy potting. When the reed switch is engaged, the values for the various modes will scroll upward or downward. To reverse the direction of scroll:

1. REMOVE the magnet from the reed switch.
2. Wait for the mode indicator to be displayed.
3. TOUCH / HOLD when the mode indicator is displayed. The values for that mode will begin to scroll in the opposite direction. Continue to HOLD until the desired value is displayed.
4. REMOVE the magnet from the RED dot. The mode indicator will be displayed again, followed by the indicator for the next Advanced Programming mode. The Advanced Programming Modes are as follows:

<b>Pr A</b>	<b>Advanced Program Mode.</b> Once the correct password is used to unlock the Advanced Program mode, the PrA display will be immediately followed by Advanced Programming modes. The Advanced Programming modes include:
<b>dL c</b>	<b>Start Delay.</b> Controls time from regulator activation to start of charging. Factory preset at one second. Adjustable to a maximum of 999 seconds. To reverse direction of scroll, release magnet and wait for LED to display dLc code. Re-activate switch with magnet and release when desired value is indicated.
<b>AH L</b>	<b>High Voltage Limit.</b> Allows user adjustment of the maximum allowable voltage alarm. Can be set to a maximum level of 15.6 volts. See information for Battery Equalization for more details on AHL adjustment.
<b>CL</b>	<b>Compensation Limit.</b> Controls maximum allowable temperature compensated system voltage. Adjustment spans from 14.1 to 15.9 volts. Default is 14.8V. To reverse direction of scroll, release magnet and wait for LED to display CL code. Re-activate switch and release when desired value is indicated.
<b>bv</b>	<b>Bulk Voltage.</b> Controls the target voltage for bulk charge mode. Starts at value set by battery program in use. Adjustment spans from 14.1 to 14.8 volts. To reverse direction of scroll, release magnet and wait for LED to display bv code. Re-activate switch and release when desired value is indicated.
<b>b1 c</b>	<b>Bulk Time.</b> Controls time setting for bulk mode. Standard value set is 18 minutes. Settings are from 6 minutes to 6 hours. To reverse direction of scroll, release magnet and wait for LED to display b1c code. Re-activate switch with magnet and release when desired value is indicated.
<b>Av</b>	<b>Absorption Voltage.</b> Controls the target voltage for absorption charge mode. Starts at value set by battery program in use. Adjustment spans from 13.9 to 14.7 volts. To reverse direction of scroll, release magnet and wait for LED to display Av code. Re-activate and release when desired value is indicated.
<b>A1 c</b>	<b>Absorption Time.</b> Controls time setting for absorption mode. Standard value set is 18 minutes. Settings are from 6 minutes to 6 hours. To reverse direction of scroll, release magnet and wait for LED to display A1c code. Re-activate switch with magnet and release when desired value is indicated.



## Basic Programming

### Programming The Belt Load Manager

The MC-614 provides the ability to manage regulator field potential, making it possible to govern the horsepower loads placed on the drive belt(s) by the alternator. The Belt Load Manager can also be used to protect the alternator from extraordinary load created by a battery load that's too large for the alternator's capacity. The Belt Load Manager is accessed in the basic programming mode, directly after the battery type programming mode. The Belt Load Manager can be accessed at the same time the battery program is set, or by itself. To program the Belt Load Manager

When activating the programming mode, keep in mind that the regulator will scroll through the basic programming mode three times before saving and returning to the operational mode. To adjust the regulator for your battery type:

1. Turn on the regulator. This may be accomplished by turning the ignition switch at the panel to the ON position. If the regulator's BROWN ignition wire is connected to an oil pressure switch, it may be necessary to start the engine to activate the regulator.
2. If the battery type program has been adjusted, TOUCH / HOLD when entry into the Belt Load Manager is indicated by the bEL display on the regulator's LED.
3. If you don't wish to adjust the battery programming, TOUCH / HOLD the RED dot when the regulator is activated. RELEASE when the Pro display is indicated. The regulator will indicate bA, for battery type, and will cycle to bEL.
4. TOUCH / HOLD. The regulator display will indicate b-0 (indicating that the Belt Load Manager is off). Continue to HOLD. The regulator display continue to scroll through seven settings. Each setting decreases the field potential by approximately seven percent.
5. RELEASE when the display indicates your desired level of field reduction. The display will cycle to bEL. You can re-activate to change your selection, or wait until the regulator cycles to the next programming mode.
6. The display will cycle to Ab2, indicating the selection mode where the user can toggle between a secondary alternator temperature sensor or a secondary battery temperature sensor on terminals #14 and #15.

<b>bEL</b>	INDICATES ENTRY INTO BELT LOAD MANAGER MODE		
<b>b-1</b>	INDICATES BLM SETTING #1. FIELD REDUCTION 7%.	<b>b-4</b>	INDICATES BLM SETTING #4. FIELD REDUCTION 28%.
<b>b-2</b>	INDICATES BLM SETTING #2. FIELD REDUCTION 14%.	<b>b-5</b>	INDICATES BLM SETTING #5. FIELD REDUCTION 35%.
<b>b-3</b>	INDICATES BLM SETTING #3. FIELD REDUCTION 21%.	<b>b-6</b>	INDICATES BLM SETTING #6. FIELD REDUCTION 42%.
		<b>b-7</b>	INDICATES BLM SETTING #7. FIELD REDUCTION 49%.
		<b>b-8</b>	INDICATES BLM SETTING #8. FIELD REDUCTION 56%.
		<b>b-9</b>	INDICATES BLM SETTING #9. FIELD REDUCTION 63%.

### Programming For Short Or Long Display Mode

You can choose the amount of information displayed on the regulator. The information displayed on the short or long display is detailed on Page 8 of the manual. To adjust the regulator for short or long display:

1. TOUCH / HOLD when entry into the short/long display selector is indicated by dSP on the regulator's LED.
2. The regulator display will indicate codes Sd (for short display) or Ld (for long display).
3. RELEASE when the display indicates your desired display mode. The display will cycle to dSP. You can re-activate to change your selection, or wait until the regulator cycles to the next programming mode.

<b>dSP</b>	INDICATES ENTRY INTO SHORT OR LONG DISPLAY MODE	<b>Sd</b>	INDICATES SHORT DISPLAY MODE	<b>Ld</b>	INDICATES LONG DISPLAY MODE
------------	---	-----------	------------------------------	-----------	-----------------------------

### Programming For Alternator Failure Advisory Mode (BDL)

The regulator provides a ground signal on the dash lamp terminal when the following conditions occur: low battery voltage (<12.7V), high battery voltage (>15.5V), high battery temperature (>52 °C), or high alternator temperature (105 °C). In addition, the user has the option to send the dash lamp to ground in the event that the stator output drops to zero volts.

**The Regulator's Default bdL setting is ON.** Monitoring stator output is an optional function which can be turned on or off in the basic programming mode. The regulator's default setting for the bdL mode is ON, meaning that the stator output is being monitored. This function can be used in conjunction with a relay to control a charge indicator lamp.


To enable or disable the stator monitoring function, activate and hold when the bdL mode is indicated. Release when the desired setting is shown. NOTE: Stator wire must be connected to the regulator's Stator-In terminal to use this function.

<b>bdL</b>	INDICATES ENTRY INTO ALTERNATOR FAILURE ADVISORY MODE	<b>OFF</b>	STATOR OUTPUT MONITORING OFF	<b>On</b>	STATOR OUTPUT MONITORING ON
<b>---</b>	INDICATES END OF BASIC PROGRAMMING MODE				

## Regulator Operation

The MC-614 regulator's microprocessor controlled charging system uses a sophisticated, multi-stage profile to deliver maximum charging output, while protecting the batteries from overcharging damage. When the regulator is first turned on, the processor performs a quick one-second self diagnostic assessment. Following that diagnostic, the MC-614 initiates a charge program as follows:

1. Start Delay - Factory set at one second. Can be user-adjusted to a maximum of 999 seconds in the regulator's advanced programming mode. See Advanced Programming section for adjustment instructions.
2. Soft Ramp - Gently increases voltage to bulk preset levels based on battery program selected.
3. Bulk Charge - The most aggressive of the charging stages. Voltage is held at a pre-set level, specified by battery program selected, for a set time period. Factory-set bulk time is 18 minutes. Adjustable in 6-minute increments.
4. Calculated Bulk Charge - Holds voltage at bulk level for six minutes, then calculates battery condition by comparing existing voltage, time at voltage, and field percentage to target values. If values are met, the regulator advances to the next stage. If values are not met, the regulator continues to bulk charge and compares real-time to target values. This will re-occur until all values are met.
5. Ramps down to Absorption voltage.
6. Absorption Charge - Regulator continues to control the alternator's output voltage for an additional 18 minutes at approximately 2/10's of a volt below bulk charging voltage. Adjustable in 6-minute increments.
7. Calculated Absorption Charge - Holds voltage at absorption level for six minutes, then calculates battery condition by comparing existing voltage, time at voltage, and field percentage to target values. If values are met, the regulator advances to the next stage. If values are not met, the regulator extends the absorption charge and compares real-time to target values. This will re-occur until all values are met.
8. Ramp down to Float.
9. Float Charge - Regulator continues to control the alternator's output voltage for an additional 18 minutes, typically at a volt less than bulk voltage (based on battery program presets). After that initial fixed time period, the regulator can respond to increased charging demand by cycling to absorption voltage. After 12 hours of continuous operation, the regulator will automatically revert to absorption voltage through calculated absorption and back to float charging stage.

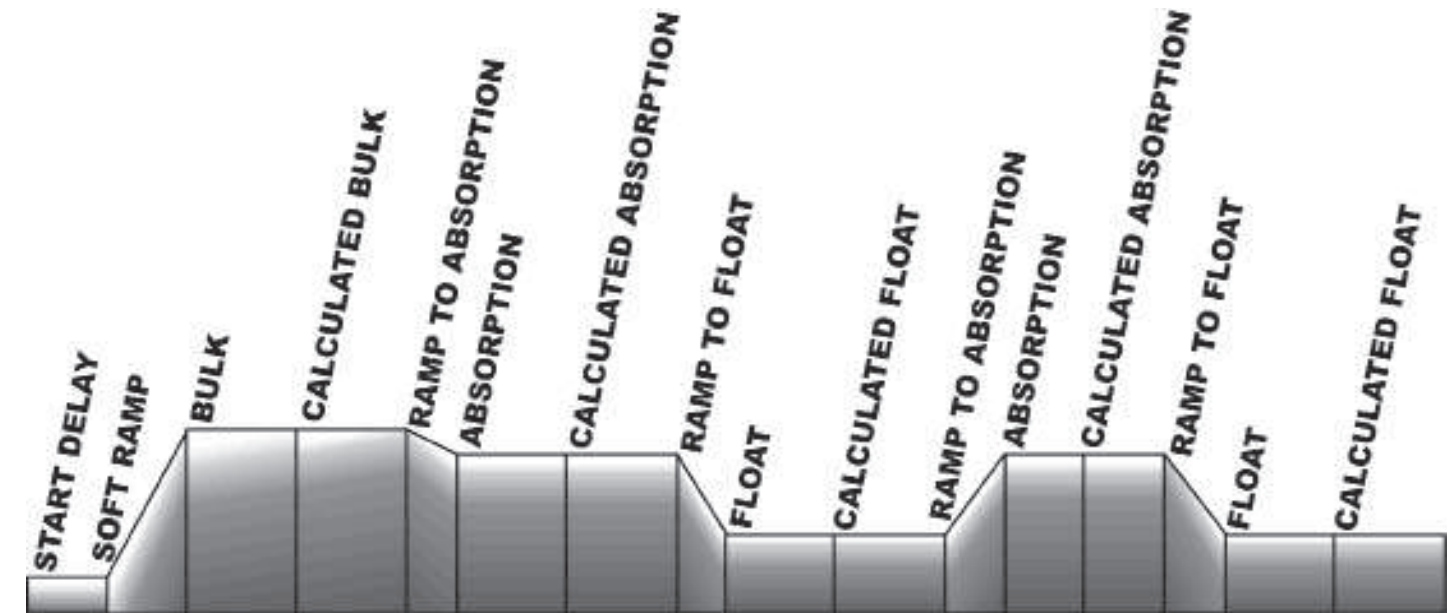

## Regulator Display Modes - Short Display/Long Display

The regulator's three digit alphanumeric LED display provides a scrolling view of charging status. Under normal operation, the display will indicate the following:

<b>BAL</b>	Indicates Balmar.
<b>614</b>	Indicates Model MC-614
<b>UFP</b>	Indicates regulator's default Universal Factory Program. Display will vary based on program selected.
<b>6-0</b>	Indicates the regulator's Belt Load Manager setting. Ranges from b-0 to b-9.
<b>-b-</b>	Indicates stage of charge. "b" indicates bulk. "A" indicates absorption. "F" indicates float.
<b>bv</b>	Indicates system Battery Voltage. Followed by actual voltage reading.
<b>Cv</b>	Indicates Calculated voltage (target voltage based on preset program levels). Followed by voltage reading.
<b>b1</b>	Indicates Battery #1 temperature. Followed by NC (not connected), or temperature in celsius.
<b>AL</b>	Indicates Alternator #1 temperature. Followed by NC (not connected), or temperature in celsius.
<b>b2</b>	Indicates Battery #2 temperature. Followed by NC (not connected), or temperature in celsius.

In addition to the information provided in the basic display shown above, the MC-614 long display provides the following data. The long display is accessed during basic programming, which will be discussed in the next section of the manual.

<b>FE</b>	Indicates the percentage of field output to the alternator. The higher the percentage, the greater the output.
<b>r3.8</b>	Indicates regulator's software revision code.
<b>SP</b>	Indicates temperature setpoint for ambient alternator and battery temperatures. Followed by degrees celsius.
<b>SLP</b>	Indicates, in millivolts, the value used to control voltage compensation for battery temperature.
<b>Hr</b>	Indicates overall regulator hours. Followed by hours (by tenths) and hours in excess of 100.
<b>FbA</b>	Indicates field threshold from bulk to absorption. Factory set at 65%. Adjust in advanced programming mode.
<b>FFL</b>	Indicates field threshold from float to absorption. Factory set at 65%. Adjust in advanced programming mode.
<b>E</b>	Indicates system advisory codes. Individually numbered codes are defined below.

The following advisory codes can be used to determine possible system errors or to identify specific operational modes. Note that E codes are cumulative and will be held in memory until cleared. Codes can be cleared by entering dSP and letting it save. Display settings DO NOT need to be changed. See basic programming for more info.

<b>E10</b>	BATTERY #1 TEMP. SENSOR CABLE SHORTED	<b>E21</b>	BATTERY #2 TOO HOT. OVER 55°C. FACTORY DEFAULT	<b>E40</b>	BATTERY VOLTAGE TOO HIGH. OVER 16 VOLTS
<b>E11</b>	BATTERY #1 TEMP. SENSOR CABLE OPEN OR NOT FOUND	<b>E22</b>	ALTERNATOR TOO HOT. OVER 107°C	<b>E41</b>	FIELD VOLTAGE TOO HIGH.
<b>E12</b>	BATTERY #2 TEMP. SENSOR CABLE SHORTED	<b>E24</b>	VOLTAGE REGULATOR TOO HOT. OVER 90°C	<b>E42</b>	STATOR VOLTAGE TOO HIGH.
<b>E13</b>	BATTERY #2 TEMP. SENSOR CABLE OPEN OR NOT FOUND	<b>E30</b>	BATTERY VOLTAGE BELOW 12.5 VOLTS	<b>E51</b>	SMALL ENGINE MODE IS IN OPERATION
<b>E14</b>	ALTERNATOR #1 TEMP. SENSOR CABLE SHORTED	<b>E34</b>	BATTERY VOLTAGE BELOW 10.5 VOLTS	<b>E52</b>	BELT LOAD MANAGER IS IN OPERATION
<b>E15</b>	ALTERNATOR #1 TEMP. SENSOR CABLE OPEN OR NOT FOUND	<b>E35</b>	BATTERY #1 TOO HOT. OVER USER ADJUSTED VALUE		
<b>E20</b>	BATTERY #1 TOO HOT. OVER 55°C. FACTORY DEFAULT	<b>E36</b>	BATTERY #2 TOO HOT. OVER USER ADJUSTED VALUE		

## Regulator Programming Modes Using The Magnetic Reed Switch


Control of the MC-614 regulator's basic and advanced programming modes is provided by a magnetic reed switch located in the upper left corner of the regulator's circuit board. The reed switch provides selectable control of the regulator's programming without creating an intrusion point as is common on many other adjustable voltage regulators currently on the market.

A small screwdriver with a magnet embedded in the tip of the handle is included to activate the magnetic reed switch. While any magnetic tipped tool can be used, the Balmar programming screwdriver does an excellent job as an interfacing tool.

Programming is accomplished by contacting and removing the magnet from the RED dot affixed to the regulator's epoxy potting. If the magnet has difficulty activating the reed switch at that position, try moving the up and down along the length of the reed switch until the RED light is illuminated at the top of the LED display, between the second and third display digits. The RED light indicates activation of the the reed switch.

Within the basic and advanced programming instructions, activation of the reed switch will be described by the following actions:

- **TOUCH / RELEASE** - Indicates the action of contacting and immediately removing the magnet from the reed switch
- **TOUCH / HOLD** - Indicates the action of contacting and holding the magnet to the reed switch
- **TOUCH / HOLD / RELEASE** - Indicates the action of contacting and holding the magnet to the reed switch, then releasing the reed switch by removing the magnet from the RED dot on the epoxy potting

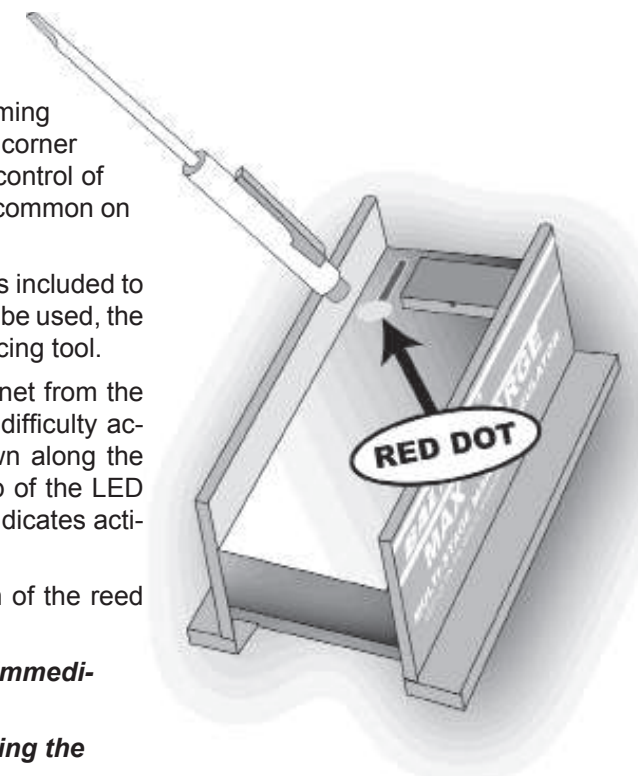

## Basic Programming Programming For Battery Type

The MC-614 features selectable programs for the following battery technologies; Standard Flooded (FSb), Deep Cycle Flooded (FdC), gel (gEL), AGM (AgL), Optima (OPS), as well as a factory default program (UFP) and a program for systems with voltage sensitive halogen equipment (HAL). Programming can be done whenever the regulator is active. **System voltage must be greater than 12.5V for programming changes to be saved.**

When activating the programming mode, keep in mind that the regulator will scroll through the basic programming mode three times before saving and returning to the operational mode. To adjust the regulator for your battery type:

1. Turn on the regulator. This may be accomplished by turning the ignition switch at the panel to the ON position. If the regulator's BROWN ignition wire is connected to an oil pressure switch, it may be necessary to start the engine to activate the regulator.
2. Once the regulator is on and the display is scrolling, TOUCH / HOLD the magnetic end of the programming screwdriver to the RED dot on the regulator as described above.
3. Continue to hold the magnet to the RED dot. The letters PRO will appear on the LED.
4. Continue to hold the magnet to the RED dot. The letters BA will appear on the LED.
5. Continue to hold the magnet to the RED dot. The LED display will begin to scroll through the various battery codes.
6. When the desired battery code is displayed, RELEASE the magnet from the RED dot.
7. The display will indicate BA once again. At this point, you have the option to re-enter the battery type mode by re-applying the magnet to the RED dot. Otherwise, the display will cycle to bEL, indicating entry into the Belt Load Manager mode.

<b>Pr o</b>	INDICATES ENTRY INTO BASIC PROGRAMMING MODE	<b>Fd c</b>	INDICATES PROGRAM FOR DEEP CYCLE FLOODED BATTERIES	<b>OP S</b>	INDICATES PROGRAM FOR SPIRAL WOUND (OPTIMA)
<b>b A</b>	INDICATES ENTRY INTO BATTERY TYPE PROGRAM MODE	<b>g E L</b>	INDICATES PROGRAM FOR DEEP CYCLE GEL BATTERIES	<b>FS B</b>	INDICATES PROGRAM FOR STD. FLOODED BATTERIES
<b>UFP</b>	INDICATES FACTORY DEFAULT UNIVERSAL FACTORY MODE	<b>Ag L</b>	INDICATES PROGRAM FOR ABSORBED GLASS MAT BATTERIES	<b>HAL</b>	INDICATES PROGRAM FOR HALOGEN SYSTEMS

**bEL** INDICATES ENTRY INTO THE REGULATOR'S BELT LOAD MANAGER MODE.